

USER INSTRUCTIONS

HydroFLOW™

CUSTOM i RANGE



www.hydropath.com

HYDROPATH TECHNOLOGY
PATENTED



Electrical Specifications

Input Voltage 87-240V AC

Input Frequency 47-63 Hz

Material Specifications

Main unit: Anodised Aluminium
End plates: UL V-0 rated polycarbonate

Water and Dust Protection

IP Rating: IP68 IEC 60529

Built-in EMI Filter

Meets: FCC 20780 Class B
VDE 0871 Level A

Safety

Europe and Worldwide:
IEC51010-190+A1:92 +A2:95 ~EN61010
Tested accorded to CENELEC National Requirements
USA: UL3101-1
Canada: CSA22.2 No:1010.1-92

Over-voltage (Transients) 10 to 20% above nominal

Environmental Specifications

Installation category:
Cat II; Altitude: <2000 Mtrs (6562'); Operating Temperature: -20 to + 50° C (-4 to 122°F);
Maximum relative humidity; Max 80% up to 31°C (87° F) decreasing linearly to 50% RH at 40° C (104° F)

Overload Protection Continuous short or open circuit on all outputs.

Insulation Basic insulation with the metal enclosure bonded to earth.

Servicing

No user repairable parts are fitted. Repair must be undertaken by an authorised repair centre.

Panel Indicators

The PSU is fitted with LED indicator lights. The Green LED indicates that the power is on, and the Red indicates that a signal is being transmitted.

CSA Certification and CB Test Certificate

In accordance with the
International (IEC) and
UL/CSA standards listed
above.




Manufactured to BSEN9002

To be installed in accordance with the
latest IEE wiring instructions.
Fuse rating: 1A.



To be installed in accordance with the
latest IEE wiring instructions.
Fuse rating: 1A.

Electrical Specifications

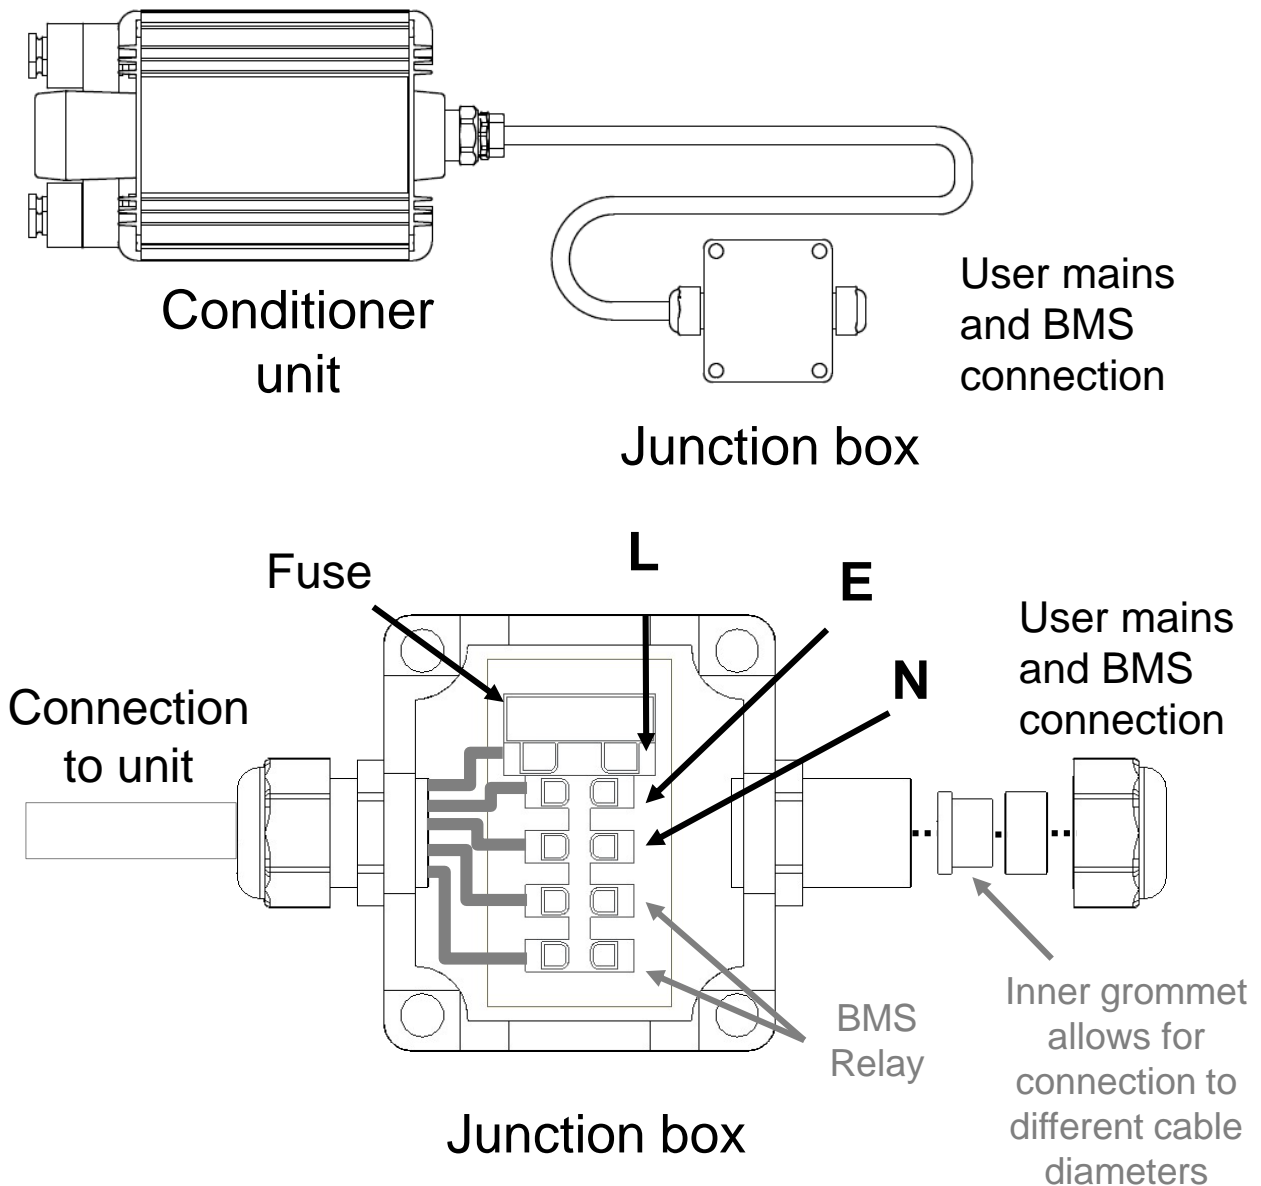

Remote Monitoring Facility

A volt free normally open contact closure is provided by the unit connection with a BMS (Business Management System) computer, to monitor that the unit is operating correctly. Connection to the BMS output is made via the junction box. A suitable 5 core approved cable must be used in order to make connection to the mains input and the BMS output.

Electrical Connection

The user must connect the electrical supply to the junction box in accordance with the on-site ruling safety legislation at the time of installation. This is the sole responsibility of the user and the site safety officer must be consulted before installation is undertaken.




Assembly

**DO NOT POWER UP UNIT WITHOUT FERRITES CONNECTED.
ALL FERRITES SUPPLIED MUST BE CONNECTED TO TRANSDUCER.**

1. Secure the transducer unit firmly on the pipe using the two steel bands. Pass the bands through the slots in both end caps, pass around the pipe and secure using screw locks (see Fig 1).
2. Insert the two hexagon nuts into the holes in the end plate, next to the ferrite holding cage (see Fig 1). If installing on a vertical pipe, place the unit with the ferrite cage upwards to ease fitting of hexagon nuts.
3. The transducer unit is supplied with ferrite bars. Insert one of these through each hole in the holding cage until the holes line up with the hexagon nuts (see Fig. 1). Take the same number of ferrites again and interleave these with the ferrites through the cage. Line up the holes and insert a rod through the ferrite bars and screw into hexagon nut, securing loosely with a wing nut at the other end. Assemble **all** the other ferrites around the pipe (see Fig. 2) and loosely secure with thumb nuts and bolts, making the final connection into the other hexagon nut. Tighten all nuts and bolts until hand tight. **Do not over tighten as ferrites are fragile.**
4. In accordance with local code and regulations, connect the junction box (Fig 3) to the electrical power supply (87V-240V AC).
5. Energize the electrical power supply and ensure that the Red and Green LED lights on the unit are glowing brightly.

Remote Monitoring

Remote monitoring is available for use with Business Management Systems (BMS). This is connected via the junction box. For additional information please contact an authorised representative.

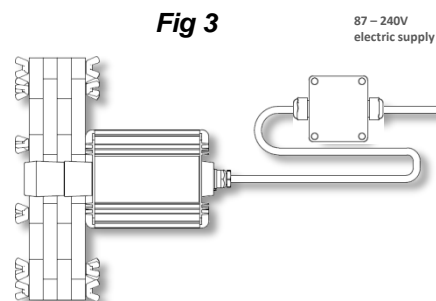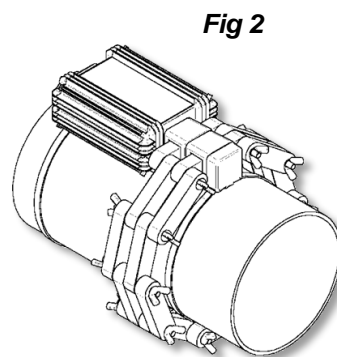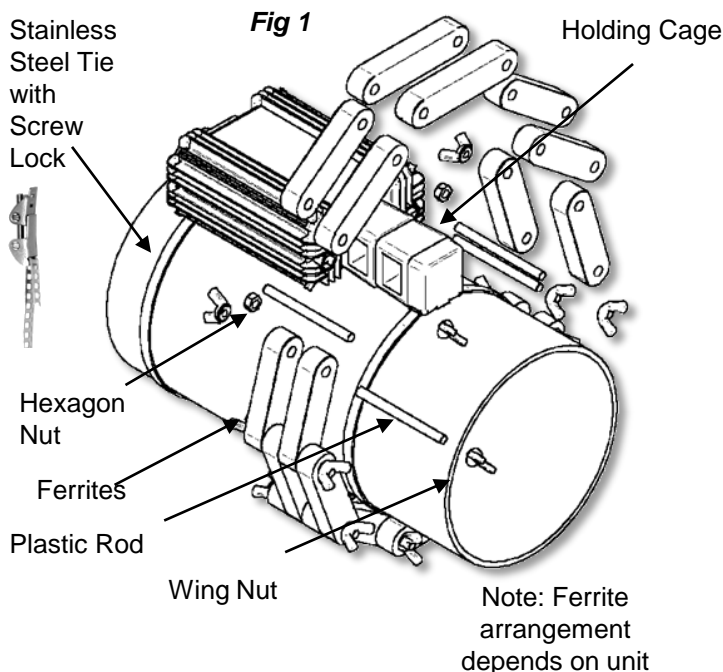


WARNING

The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.


Assembly

DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.


- The unit is supplied with a bracket for ease of mounting to the pipe. The two upper plates should be loosely secured with bolts before installation.

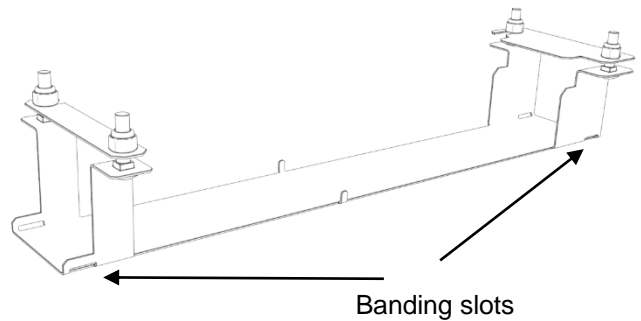

- Pass the two stainless steel bands through the slots in the bracket.
- Then pass the banding through the slots in the ferrite support bracket or brackets.

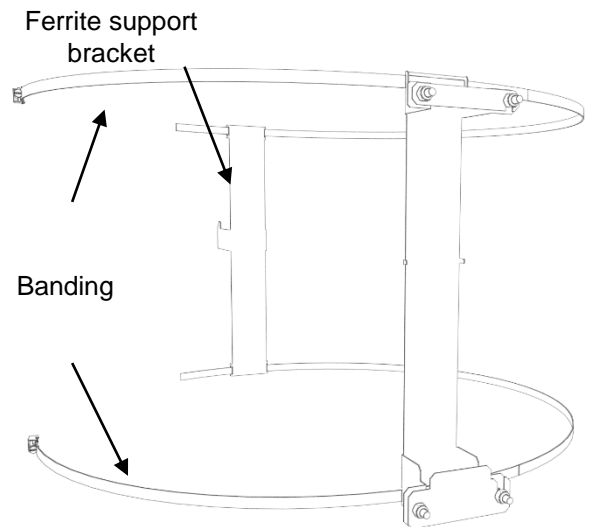

- Place the brackets around the pipe approximately evenly.
- Secure straps by tightening clamps with flathead screwdriver or hex socket driver

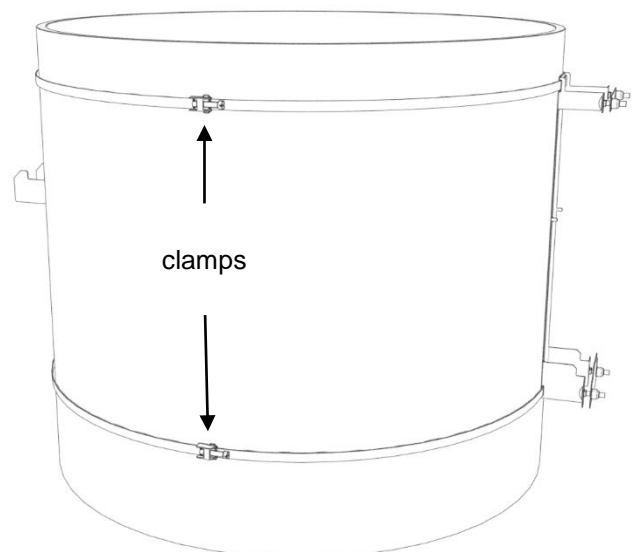


WARNING

The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.


Assembly

DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.


- Place the unit on the bracket and hold in place using the swinging plates.
- Secure by tightening the four steel nuts.

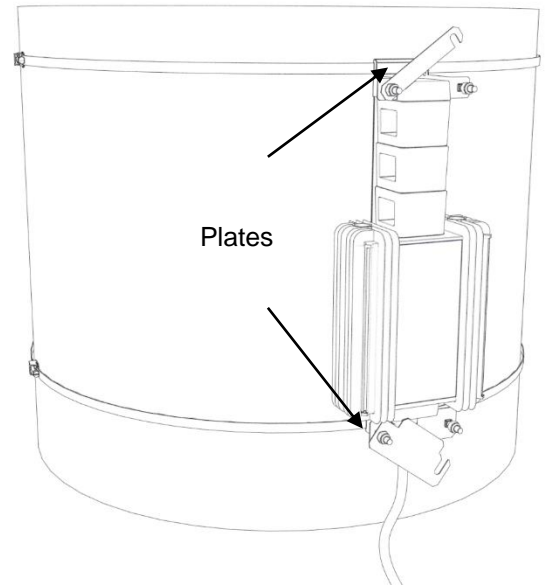

- Insert the two hexagon nuts into the holes in the end plate, next to the ferrite holding cage.
- If installing on a vertical pipe, place the unit with the ferrite cage upwards to ease fitting of hexagon nuts.
- Insert one of the ferrite bars through each hole in the holding cage until the holes line up with the hexagon nuts.

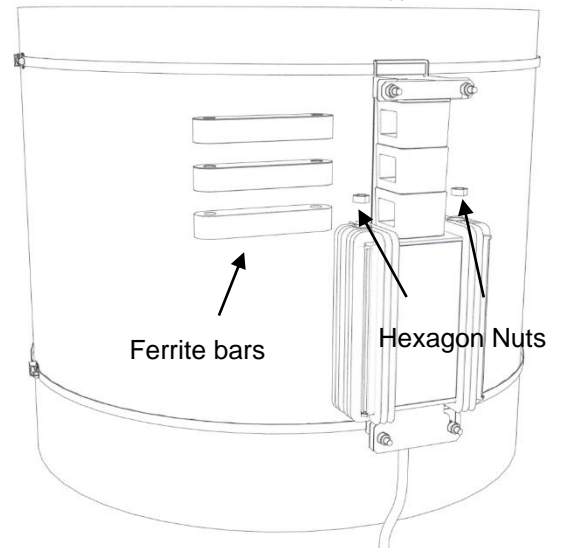

- Take an equal number of ferrites, insert a plastic rod through the holes in both sets of ferrite bars and loosely screw into hexagon nut.
- Secure loosely using a wing nut.
- Repeat on opposite side.

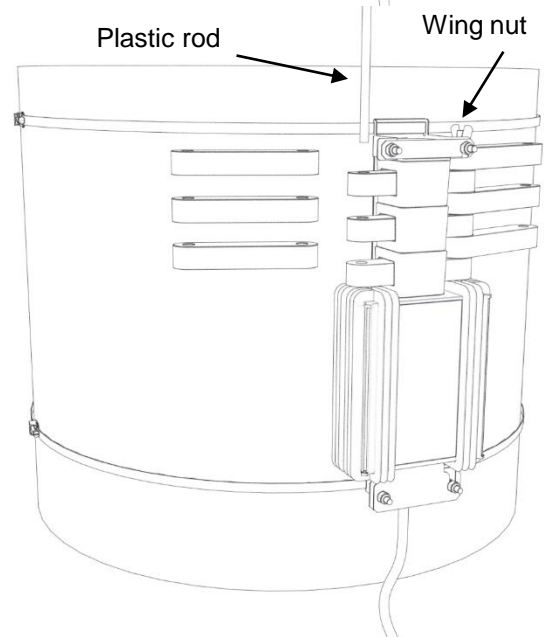


WARNING

The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.


Assembly

DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.


- Assemble **all** the other ferrites around the pipe according to the mechanical configuration specified for the unit.
- Loosely secure each ferrite with plastic rods and wing nuts.
- Ferrites can be pre-assembled in sections for convenience

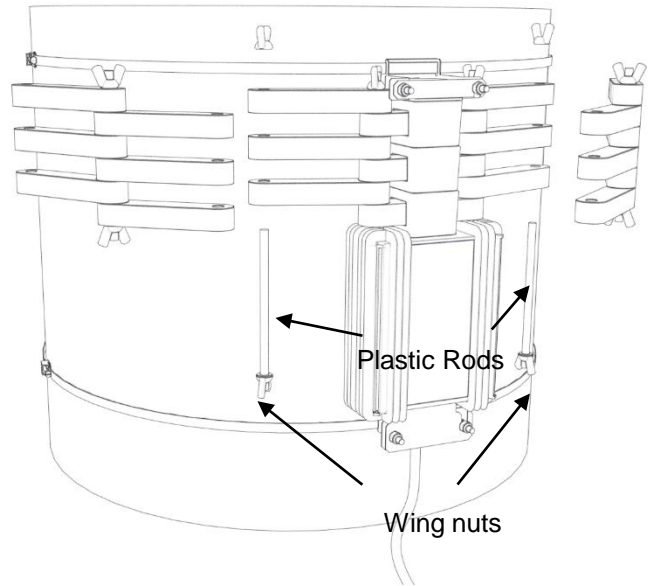

- Adjust position of ferrite support brackets if necessary
- Once the ferrite ring is complete, tighten all wing nuts until hand tight.
- **Do not over tighten as ferrites are fragile.**

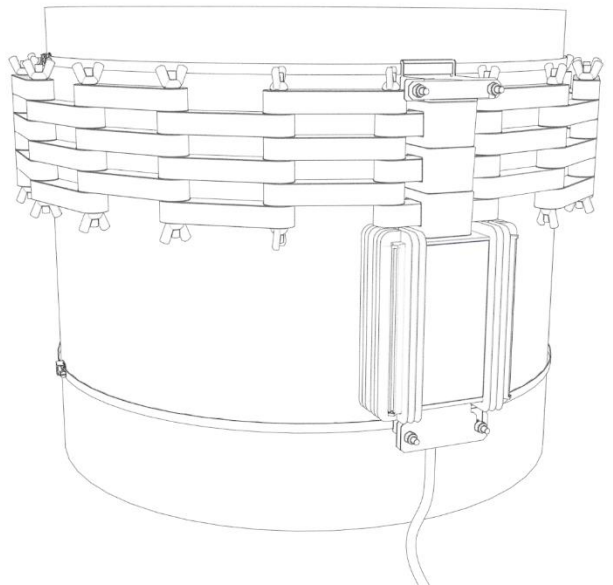

- In accordance with local code and regulations, connect the junction box to the electrical power supply (87V-240V AC).
- Energize the electrical power supply and ensure that the Red and Green LED lights on the unit are glowing brightly.

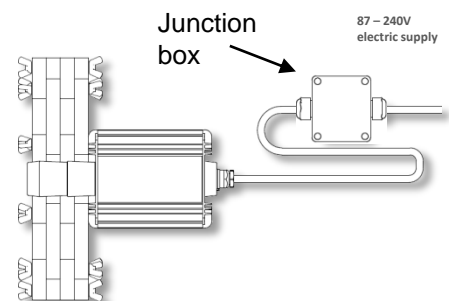

WARNING

The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.

Mechanical Details

Pipe Size OD in Inches	Lines of Ferrite/ Number of Cages	Ferrites per Line	Total Ferrites
10	2	10	20
12	2	12	24
14	2	14	28
16	3	16	48
18	3	18	54
20	3	18	54
22	3	20	60
24	3	22	66
26	3	24	72

Larger sizes are available on request.

The above table is only a guide. Custom units are produced on an individual basis to satisfy the specific needs of each particular application. Hydropath reserves the right to modify the above details as needed.

Location Criteria


The i Range unit can provide a range of benefits, including protection against limescale, treatment of biofouling and flocculation of particles. The most effective location for the unit depends on the result desired.

- For protection against Limescale due to heating, the unit should be fitted on the cold feed to where the water is heated.
- For protection against limescale, the unit should be fitted after any pumps or filters as these can degrade the conditioning effect.
- To enhance flocculation or kill bacteria, the ideal location is before the pump feeding a filter.


Electrical Loops

An electrical loop is created whenever an electrical connection is made from one side of the ferrite loop to the other, e.g. by metal supports, wiring or pipework. A loop will prevent the unit from operating correctly.


This problem can be solved by moving the unit outside the electrical loop. If this is not possible, the metal support brackets can be electrically insulated. Installing the unit on a section of plastic pipe eliminates the possibility of an electrical loop.

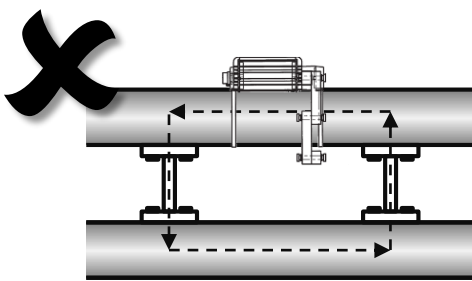


Brackets create loop

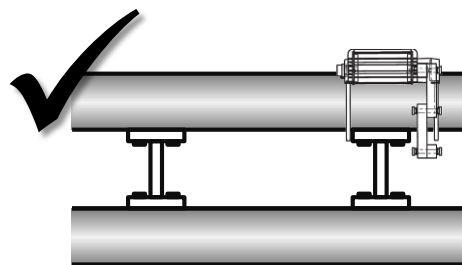

Move unit out of loop

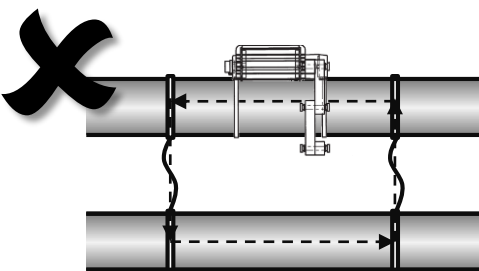

Wiring creates loop

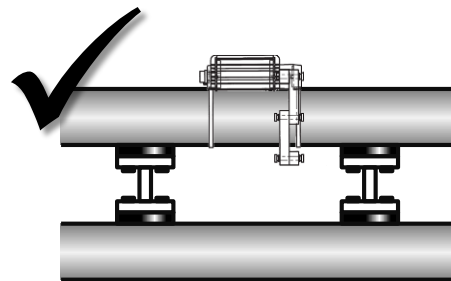


Electrically insulate brackets

If you are unsure of any details of fitting or installation, please contact your local Hydropath representative for technical support

Custom Model	Long ferrites	Stainless Steel Banding	Rods	Hex Nuts	Wing Nuts	Fixing Bracket	Ferrite support Bracket
10"	20	2	10	2	18	1	1
12"	24	2	12	2	22	1	1
14"	28	2	14	2	26	1	1
16"	48	2	16	2	30	1	2
18"	54	2	18	2	34	1	2
20"	54	2	18	2	34	1	2
22"	60	2	20	2	38	1	2
24"	66	2	22	2	42	1	2
26"	72	2	24	2	46	1	2

The table above indicates the parts included with each i Range Custom Model. Please refer to the User Instructions for further details on the complete installation process.

<i>Box Contents List:</i>	
Transducer (Model)	Ferrites & Fixings (refer to table above)
User Instructions	

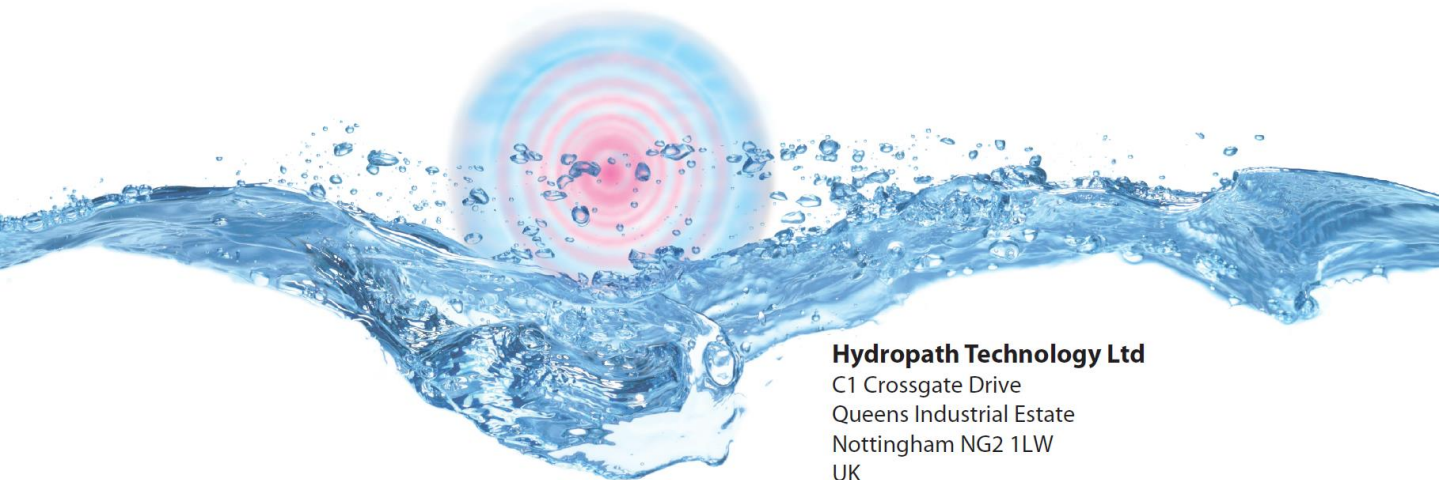

Hydropath Technology Ltd
 C1 Crossgate Drive
 Queens Industrial Estate
 Nottingham NG2 1LW
 UK
 Tel: +44 (0) 115 986 9966 Fax: +44 (0) 115 986 9944
www.hydropath.com sales@hydropath.com

